 
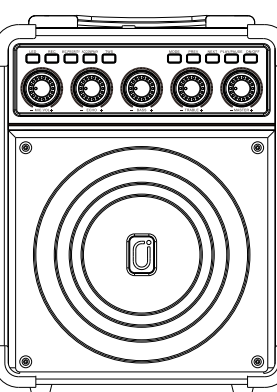 


User Manual


Multifunctional Speaker
Model:TX05

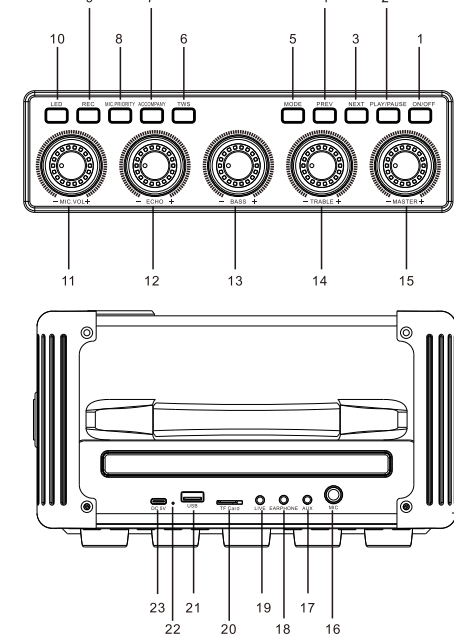

	2	7	4
--	---	---	---

[illegible]

Remote Control Key Illustration

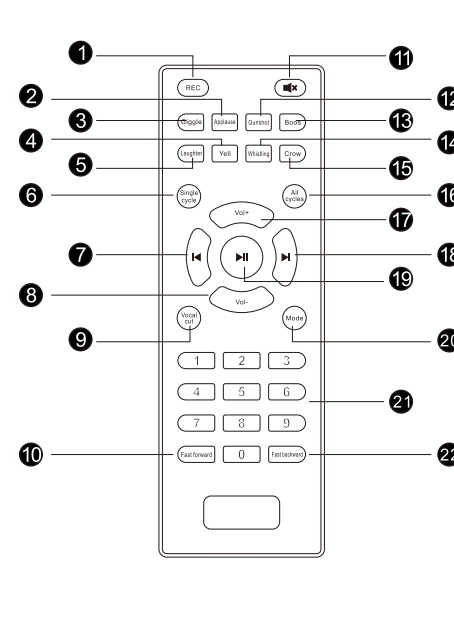

REC: Long press this key to start recording function. Use a USB drive or TF card instead. (Before using the recording function, please remember to turn on the recording function in the settings menu.)

REC: After recording, the recording file will be saved in the recording folder on the microphone before exiting the recording mode. Short press can play the recording file.

2. Applesoft (sound effect effects)

3. Diggle (sound effect effects)

4. Tink (sound effect effects)

5. Laughter (sound effect effects)

6. Tink (sound effect effects)

7. PLOV: Short press to stop playing music playback.

8. PLOV: Short press for previous song.

9. PLOV: Short press to decrease the volume.

10. Accordion: Short press to play the accordion music.

11. Fast Forward: Short press can fast forward the song while playing music playback.

12. Accordion: Short press to play the sound, pressing again returns music playback.

13. Banquet (sound effect effects)

14. Bloop (sound effect effects)

15. Whistling (sound effect effects)

16. Cowbell (sound effect effects)

17. A-Ges: Cycles between song loop at music playback.

18. WDW: Short press to play the song.

19. NEXT: Short press to next song.

20. PLAY/PAUSE: Short press to pause/normal playback.

21. Number key: Press the 1-9 number keys to quickly select the song. For example, press the number 3 to play the song 3. The song shows "0003", and the number button is played after 3 seconds. To play the song 10, press the number 10, and press the number button 2 times. For example, after pressing the 10th song, the 10th song will be played, and the other songs you want will be selected next time. (Note: to record the song, please press the REC key.)

22. Fast Backward: Short press can fast backward the song while playing music playback.

1. The device def

Turn on your phone's Bluetooth and search for "T750 Pro". Then, you can connect the music app on your phone after a successful connection and play music.

Two-Way Function

Please turn on both speakers simultaneously, then short press the T750 button on either side. The two speakers will automatically pair with each other, and a "D'D' sound will indicate a successful pairing.

Music Playback

Insert the TF card/USB drive, then repeatedly press the MODE button to enter the music mode; can play MP3 songs from the TF card/USB drive.

Short press the PLAY/PAUSE button to play/pause, short press the PHONES/TEXT button to switch page, and rotate the volume knob can adjust the volume level.

AUX Function

Please use the appropriate audio cable to connect the audio-output devices. Then you can turn on the device and play audio as a variable volume.

Insert the other end of the audio cable into the AUX port of the speaker, then repeatedly press the MODE button to enter audio input mode for playback.

Lighting Function

Short press the LED button can switch the light effects (long press can turn the light light on or off).

[illegible][illegible][illegible][illegible][illegible][illegible][illegible][illegible]