 


User Manual

Model: JYX-TX02

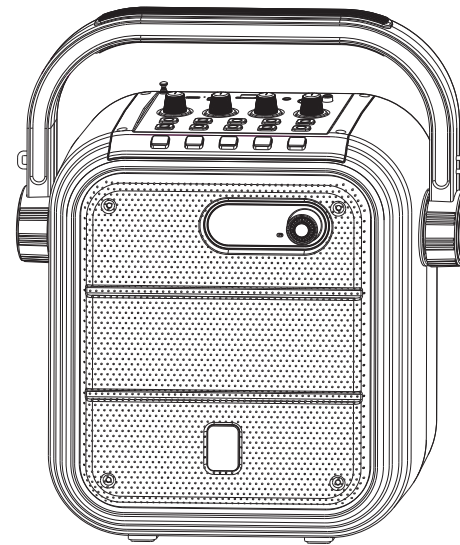

165.00 mm

115.00 mm

UK REP EVATOST CONSULTING LTD
Suite 11, First Floor, Moy Road Business
Centre, Taffs Well, Cardiff, Wales, CF15 7QR
contact@evatmaster.com

EC REP eVatmaster Consulting GmbH
Bettinastr. 30
60325 Frankfurt am Main, Germany
contact@evatmaster.com



2022-11-10

Catalogue

Attentions.....	1
Product Functions.....	2-3
Remote Control	4-5
Technical Indicators.....	6
Packing List.....	6
FAQ.....	7

Dear users:

 
Thank you for purchasing Karaoke Machine. Please read the directions carefully before using and follow the correct instructions. Our company does not assume any responsibility for product damage caused by improper use.

Matters needing attention:

To ensure safety, please read carefully and follow the following safety instructions:

- 1.The equipment is up to The China Compulsory Certification.
- 2.The equipment should be used in a dry environment.
- 3.Do not place a fire source near the equipment.
- 4.Do not use near water source to avoid corrosion of products and accessories.
- 5.Do not open or disassemble or repair the battery module by yourself. There will be a risk of explosion if the battery is not replaced properly. Do not put the battery into water, fire or any overheated environment.
- 6.When the use of wireless devices is prohibited or the use of devices will cause interference and security risks to electronic devices, please turn off this product.
- 7.When taking an airplane, please follow the relevant regulations and regulations of the airline company to turn off this product before the airplane takes off to avoid any hidden danger.
- 8.The charging cable cannot be squeezed, pulled, bent, knotted, or suspended from heavy objects in order to avoid damage to the insulation layer of it and cause electric shock.


Guide to control and setting

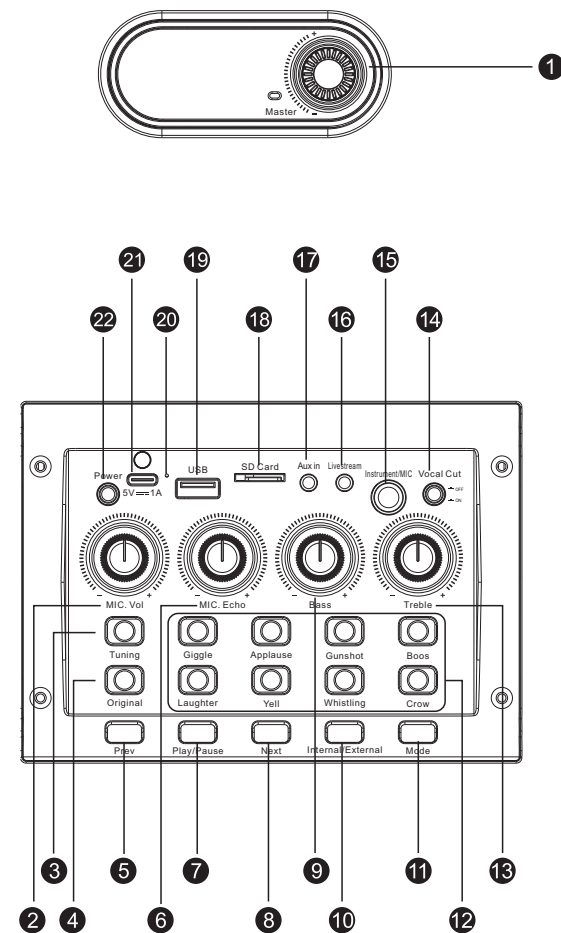

Operation Guide

- 1.Master: Main volume control knob
- 2.MIC VOL: Adjust the microphone volume.
- 3.Voice Tuning
- 4.Original Voice
- 5.Previous:When inserting with USB/TF card, short press is the previous song, long press is fast backward; In the Bluetooth mode, short press is the previous song.
- 6.MIC Echo
- 7.Play/Pause: When USB/TF card is working, short press to play/pause; In Bluetooth mode, short press is to play/pause and long press to disconnect the mobile phone/TWS function. When the Bluetooth mode is not connected, long pressing for TWS function(This function is only valid for the same model);
- 8.Next: When USB/TF card is working, short press for the next song, long press to fast forward; In Bluetooth mode, short press for the next song.
- 9.Bass: Adjust bass sound.
- 10.Internal/External: During the live streaming, press once to turn off the horn sound, and press again to turn on the horn sound;
- 11.Mode: Power on default for Bluetooth mode. Short press to switch between Bluetooth, USB, TF card and AUX-IN. When TF card is working or in Bluetooth mode, long press is for single cycle and full loop playback.
- 12.Sound Effects(Giggle, Applause, Gunshot, Boos, Laughter, Yell, Whistling, Crow)
- 13.Treble: Adjust treble sound
- 14.Vocal Cut(This function can only eliminate the original sound for stereo music)
- 15.MIC jack
- 16.Live Stream: Connect the machine to the phone through the livestream cable, and then open the livestream APP for livestreaming.
- 17.AUX-in
- 18.TF Card Port
- 19.USB port(only used for data transmission)
- 20.Charging Indicator: the indicator is red when charging, and blue when fully charged
- 21.5V 1A Charging Port
- 22.Power

 Remote Control

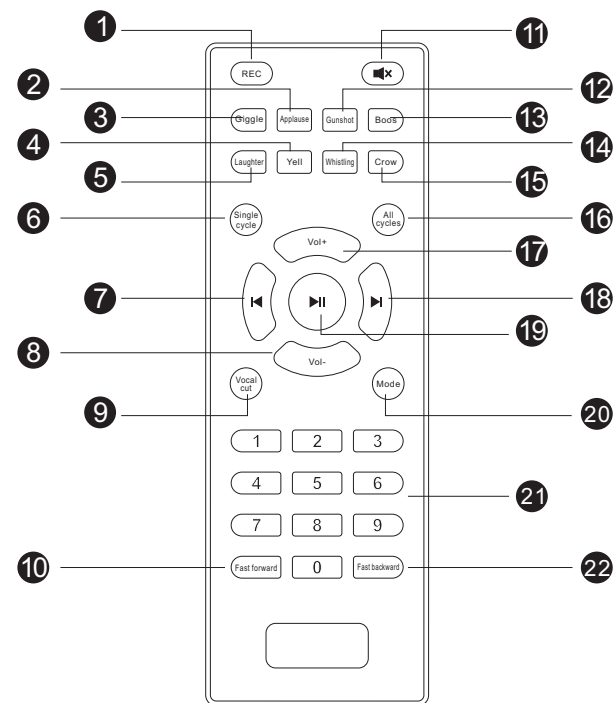

Directions of Remote Control

1. Recording: Long press to enter the recording mode.(The recording function is only available when a USB flash disk or TF card is inserted)
2. Applause(Sound effect)
3. Giggle(Sound effect)
4. Yell(Sound effect)
5. Laughter(Sound effect)
6. Single tune circulation
7. Previous
8. Volume decrease
9. Vocal Cut(This function can only eliminate the original sound for stereo music)
10. Fast forward
11. Mute: Press this key to mute when playing music and press again;
12. Gunshot(Sound effect)
13. Boos(Sound effect)
14. Whistling(Sound effect)
15. Crow(Sound effect)
16. All cycles: When playing music, press this key to play all audio files in a loop.
17. Volume increase
18. Next
19. Pause/Play
20. Mode
21. Number keys: Press the "0-9" number keys to quickly select the track you want. If you want to play the third song, press the number key 3 first, and the display will show"0003" and the third song will be played 3 seconds later; If you want to play the 12th song, first press the number key 1, then press the number key 2 (You can select this song only if it exists in the folder!) After that, the 12th song will be played, and other tracks you want will be selected similarly. (Note: it only works when playing music in USB or TF.)
22. Fast backward

SPECIFICATION

Product model: JYX-TX02

Bluetooth: 5.0

Maximum peak power: 280W

Battery capacity: 3.7V/5400mAh

Input voltage: 5V 1A

Speaker: 5.25 "subwoofer+ 2" tweeter

PACKING LISTING

Speaker System.....	1PC
User Manual.....	1PC
Remote Control.....	1PC
Adjustable Shoulder Strap.....	1PC
Wireless Microphones.....	2PC
Charging Cable.....	1PC
3.55mm Audio Cable.....	1PC

FAQs

Q: 1.No sound when playing songs.

- A: 1. Check the input sound source (U disk/TF card) and the song format.
2. Check whether the main volume knob is at the minimum position, and properly adjust the main volume knob.

Q: 1.No sound when the microphone is turned on.

- A: 1.Check whether the wireless microphone volume is at the minimum position, and properly adjust the volume button to increase the volume.
2. Check the battery power of the wireless microphone, and replace the battery.